


I100+

The high-performance 3D printer for fully automated central production.

The I100+ offers all functions for series production of high-quality 3D parts. A true industrial printer, designed for 24/7 production, enables lowest production costs per part. The Automatic Separation Module (ASM) cuts off the printed parts from the building platform and collects them in an integrated catch tank. Thanks to the automatic refill unit, the machine works continuously without manual operation. The open system architecture allows printing with a variety of materials.

Performance parameters	I100+
Building area	338 × 190 mm
Native pixel	+/- 31 μm
Max. part height	150 mm (with ASM: 80 mm)
Light source	High power UV LED
Resolution	4K 3840 × 2160 XPR
Dimension (W × H × D)	625 × 1593 × 443 mm
Connections	TCP/IP, USB
Control	10" Touch-Screen
Versions	Stand-Alone Conveyor (Specifications on request)

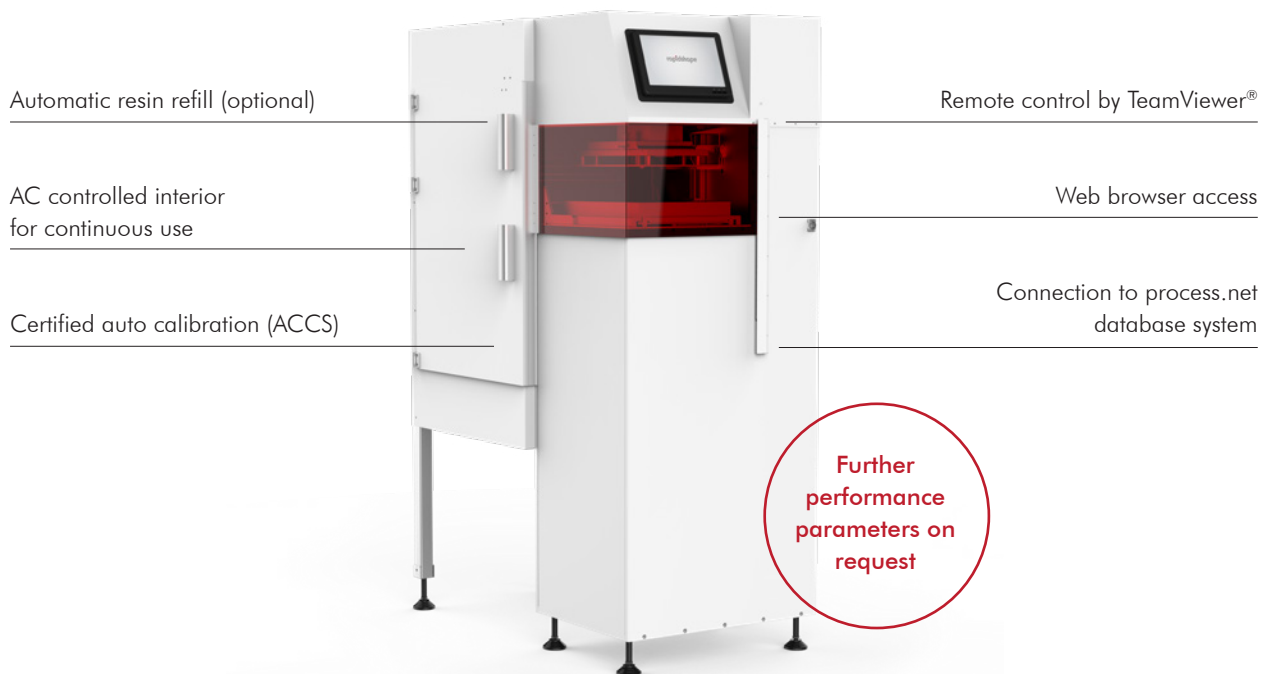

Automatic separation module (ASM)



Open System



High safety standards