


# RS cure

**For the perfect finish of your components:  
360°curing at the touch of a button**

The RS cure automatic exposure system cures your printed parts homogeneously from all sides thanks to powerful LEDs. The integrated vacuum technology enables excellent curing of the materials. Thus, the materials can be processed validated by many material manufacturers. The process-controlled connection to your printer ensures that the correct program is always automatically selected and that the mechanical properties and biocompatibility of the end product are achieved. The pre-settings are tested and validated in close cooperation with the material partners to ensure process reliability. In combination with the stackable RS wash, it offers a simple and validated workflow.

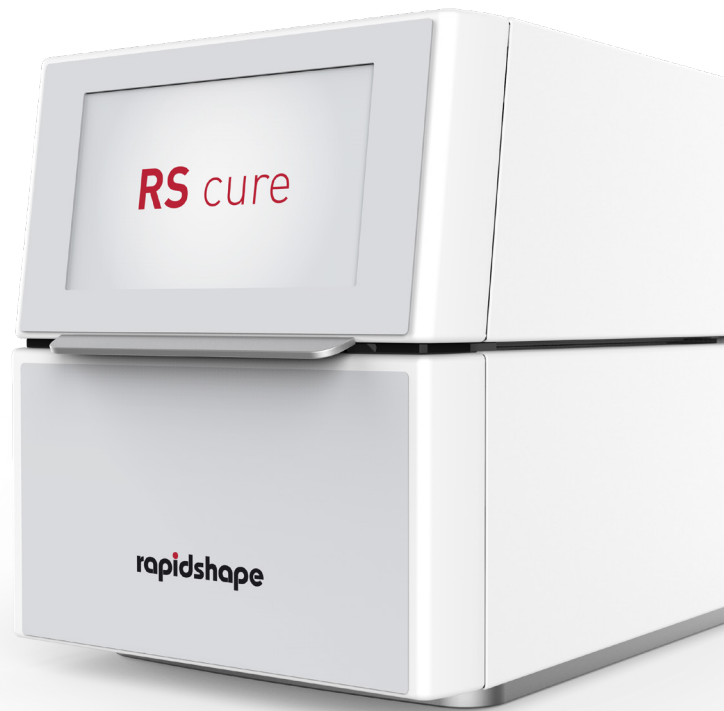

Wireless connectivity to printer



Validated process



Compatible with various material suppliers



Works with vacuum

Performance parameters	RS cure
Volume	130 x 75 x 60 mm
Curing time	approx 6–10 minutes (depending on material)
Connections	WLAN/LAN
Dimension (W × H × D)	230 x 270 x 380 mm
Version	with vacuum