



# PRO 30

YOUR DESKTOP MVP



**rapidshape**

# PRO 30

## *Powerful Performance*

- 4k Light Engine printing with  $\pm 25 \mu\text{m}$  pixel size optimized for high-precision printing
- Powerful printing speeds with patented Force Feedback and RS Turbo technology
- Built-in chamber heating allowing for resin flexibility

## *Scalable Printing for Dental Labs*


200+ validated resins available for 15+ dental applications



**Crown & Bridge Models**  
up to 6 Crown & Bridge Models

**20 minutes**

50  $\mu\text{m}$  layer thickness

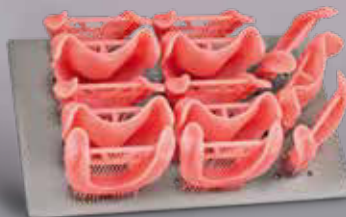

**Denture Bases**  
up to 13 Denture Bases

**90 minutes**

100  $\mu\text{m}$  layer thickness



**Surgical Guides**  
up to 10 Surgical Guides

**30 minutes**

100  $\mu\text{m}$  layer thickness

## Reliable

- **Integrated Camera** reporting print job success to RS Customer Portal for production control and quality assessment
- Built to last DLP 3D printer with high-quality glass reservoirs
- Intelligent connectivity from software, to 3D Printer to WASH to CURE

## Rapid Support

**1-Year CARE Plus Plan included with purchase of PRO 30 3D printer**

Service includes:

- 90-Day Coach with Rapid Shape Digital Workflow Specialist
- Continued Support and access to workflow guides and troubleshooting tools
- Annual sensor send-in
- Full repair coverage & immediate device replacement if necessary




Item Number:  
**NARSPRO30**



# RS Crystal Polish

High-Shine Splints Requiring Minimal Polishing

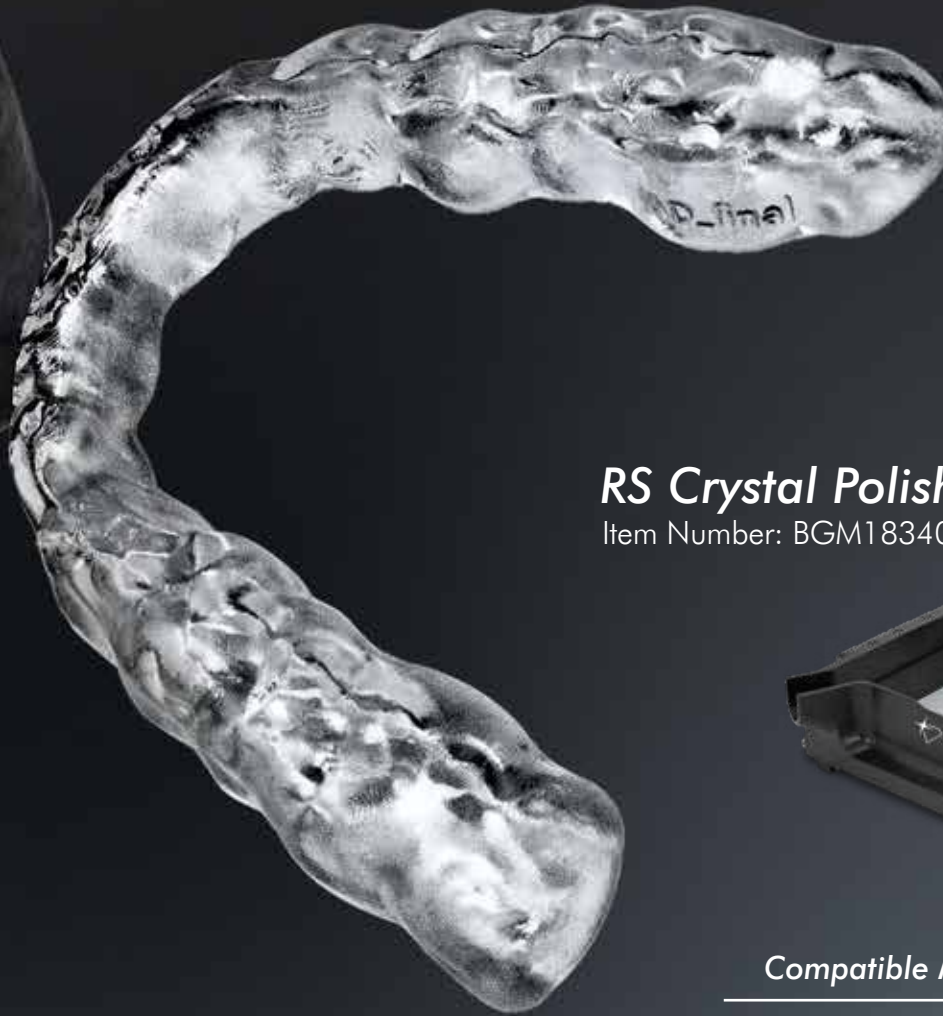

**RS Crystal Polish Reservoir**

Item Number: BGM183401



*Compatible Materials*

detax keystone  
INDUSTRIES



*Up to 18 Splints printed in 90 min.*

- Crystal clear print results with no yellowing effect after WASH & CURE cycle
- Reduces up to 90 % of polishing required after curing

# PRO 30 Accessories

## Accessory Package

Item Number: RS006175

### Your Setup for Continuous, Clean Printing

- Includes UV light proof storage for up to 5 reservoirs
- 4x Glass Reservoirs with covers
- Additional consumables



## PRO 30 Reservoir

Item Number: BGM183400



### Durable Glass Reservoir

- Tempered glass reservoirs without consumption limitation
- RFID chip integrated to indicate resin type

# Post-Processing Solution

Fully streamlined connectivity between Rapid Shape 3D printers, WASH and CURE removing guesswork and manual parameter input from start to finish



## Wash

Item Number: NARSXWASH

- Max chamber capacity: 6 Full arch print jobs
- 2-step wash cycle and drying mechanism
- Reduced smell with activated carbon filtration
- Validated and pre-installed wash parameters for 200+ resins
- Stackable with CURE

## Cure

Item Number: NARSXCURE


- Max chamber capacity: 6 full arch print jobs
- Integrated vacuum system eliminating need for Nitrogen tanks or generators
- Achieving peak performance 3D prints with 360° curing in a controlled vacuum environment
- Nitrogen inlet built in



SCAN TO VIEW WASH



SCAN TO VIEW CURE

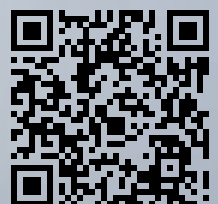

# rs VIVO



## ***RS VIVO Model***

Premium model resin ideal for esthetic and precision dental models, including die and implant models.

Available colors: Ivory and Sand.

## ***RS VIVO Model Natural Pink***

High-quality 3D printing resin designed to visually replicate the natural appearance of oral soft tissue. Ideal for shade matching for veneers, crowns, and other prosthetic work.

Available color: Natural Pink



PRODUCT	SIZE	ITEM NUMBER
RS VIVO Model Ivory	1 kg	RS006190
RS VIVO Model Ivory	5 kg	RS006216
RS VIVO Model Sand	1 kg	RS006192
RS VIVO Model Natural Pink	1 kg	RS006191



*printed with **rs VIVO**  
Model Natural Pink and Ivory*



# Our Happy Customers



// *The PRO 30 is really a next-level 3D printer. We primarily use it for printing models, and the large platform allows us to produce many at once with impressive precision. It's become our go-to printer for implant models – the accuracy and capacity make it perfect for our workflow.* //



**Przemek Seweryniak**  
CDT and CEO of Cosmodent, Sweden

## Book A Demo

and Request a Sample Print

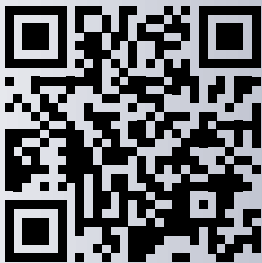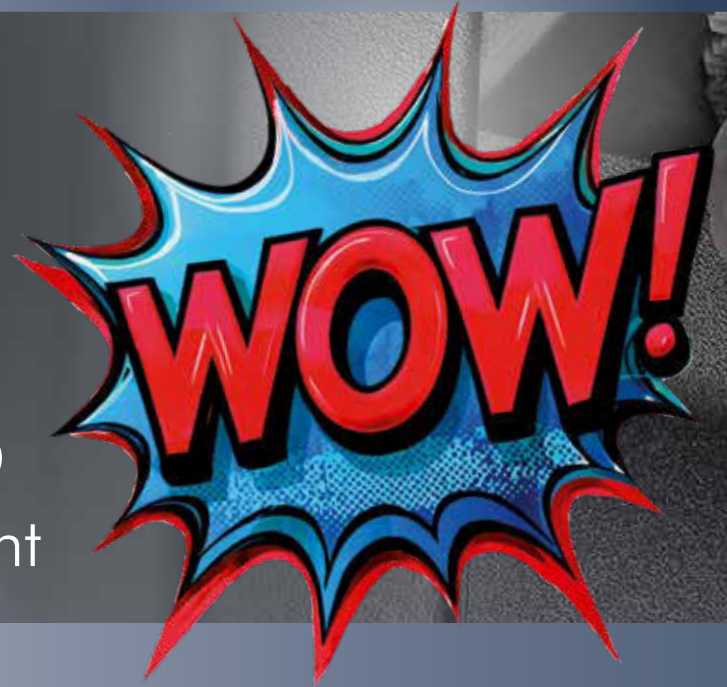

Scan to Schedule remote  
30-min demo with  
RS Digital Workflow  
Specialists and to  
request print samples.

**Contact Information for Customer Support:**

[Support.US@RapidShape.De](mailto:Support.US@RapidShape.De)  
[OnBoarding.US@RapidShape.DE](mailto:OnBoarding.US@RapidShape.DE)  
Phone: +1 919 480 2975